


# Configure PerfectCue PC-Micro v 2.0

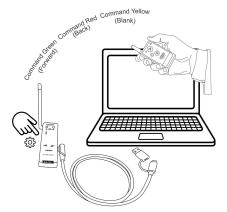

Connect a USB data cable to the right-side USB port.

Launch the app.

Press Settings (\*), if requested. The Yellow LED blinks as the device exposes its memory to the computer and is recognized as a new, lettered drive – "PERFECTCUE (D:)".

View the keystroke shortcuts associated with each transmitter button. These control presentations on connected computers.

Click a command.

Enter a new keystroke such as [PG DN] or [SPACE], or a keystroke macro such as [Ctrl] [+] into the edit dialog.

To disable a transmitter key such as the blank button, enter a null value.

	Forward	Reverse	Blank
USB - Port A	RIGHT	LEFT	b
USB - Port B	RIGHT	LEFT	b
USB - Port C	RIGHT		В
USB - Port D	RIGHT		В
Light Cue Repeat	1	1	
Sound Cue (Port A)	Select Audio File	Select Audio File	Select Audio File
Light Cue Animation	Still  Slow  Fast		
Keystroke Delay	0 <b>v</b> sec.		

# ОК

#### Sound Cue (PortA)

Sounds are not available on this version of the PC-Micro.

#### **Light Cue Animation**

Animations are not available on this version of the PC-Micro.

#### **Keystroke Delay**

Slide changes can be delayed for up to 1 second after PC-Micro receives the wireless command. Why would you want this? See below\*\*.

#### SAVE ALL SETTINGS



#### **Update the Firmware**

### **CHECK FOR UPDATE**

Download and save a new version of the file "PerfectCue.bin to your computer. It contains the latest firmware file.

Browse for the PerfectCue.bin file. Open. UPLOAD.


Unplug the USB cable(s). Reconnect. Test.

#### **Popular Shortcuts for Presentation Applications**

Command	PowerPoint <sup>®</sup> (Windows)	Keynote® (MAC)	ProPesenter <sup>®</sup> (MAC)	
			Windows	MAC
Forward	RIGHT [ <b>)</b>	DOWN [ <u>V</u> ]	RIGHT [ ▶ ]	RIGHT [
Back	LEFT [	UP [ 🗢 ]	LEFT [ 🔳 ]	LEFT [ 📕 ]
Screen Blank	[ <u>b]</u>	[ <u>b</u> ]	F2	F2
Screen White	[ <u>w</u> ]	[ <u>w]</u>		
Enlarge Image	[ <u>Ctrl]</u> [ <u>+</u> ]	COMMAND [		
Start/Stop VIdeo	[ <u>Alt]</u> [ <u>P]</u>	[ <u>SPACE</u> ]		

## \*\*Slide Change Delay

Have you ever been to an airport or a large train station? Important announcements are often preceded by a chime, a short musical motif, or a simple word like "Announcement!" These are designed to get travelers' attention before important information is delivered. Larger PerfectCue models have cue sounds that alert the audience. PC-Micro has no sounds. A delay can create a brief silence of the presenter's anticipation and helps cue viewers to a slide event.

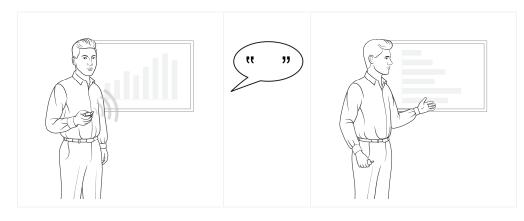

sales@dsan.com

