




D'San Corporation
142 Mineola Avenue, Roslyn Heights, NY 11577
Tel: 516- 625-5608 Fax: 516 625-0878
Email: info@dsan.com

Special Setup Instructions for The Deliberator Mini Meypads

Open the software. Click “Show Keypads” [1].

Your mini keypads may have been pre-assigned ID numbers. If these do not correspond to ID numbers that you have set up, change the numbers on the keypads. You will find the dials on the bottom just next to the Cat-5 jacks. No two keypads should have the same ID numbers. And each keypad must correspond to an assigned name box on the screen. If the name box has no name, a keypad with this number will be inactive.

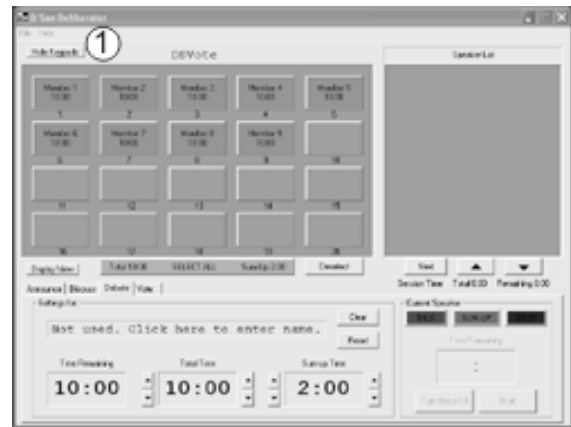


The standard Deliberator keypads have, in addition to voting buttons, a request to speak button, Green-Yellow-Red phase lights and a digital display.

The digital display would light up the moment the keypads are attached to the distribution box and this would confirm that they are communicating with the Deliberator software on the PC.




If you have ordered small keypads for voting only, (shown at right), when attaching the keypads to the distribution box, place the Deliberator in the Vote Mode (1) and then start the voting by clicking Vote (2).

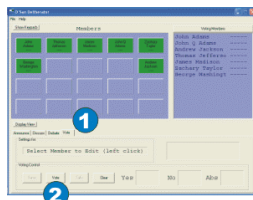

As soon as the keypads are attached, the voting button lights will blink. This will confirm that the keypads are communicating with the PC.



If you have ordered small keypads for Request-to-Speak only (shown at right), when attaching the keypads to the distribution box, place the Deliberator in the Discuss or Debate Mode (1) and then right click the name button whose keypad ID corresponds to the keypad ID of the keypad (2).

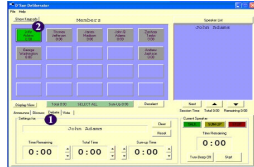

This will cause the Request-to-Speak button to light up, confirming that the keypad is communicating with the computer.

Confirm that the keypad ID is the correct keypad ID for the member name.

